



# D5-Evo/D10 synchronisation diagram

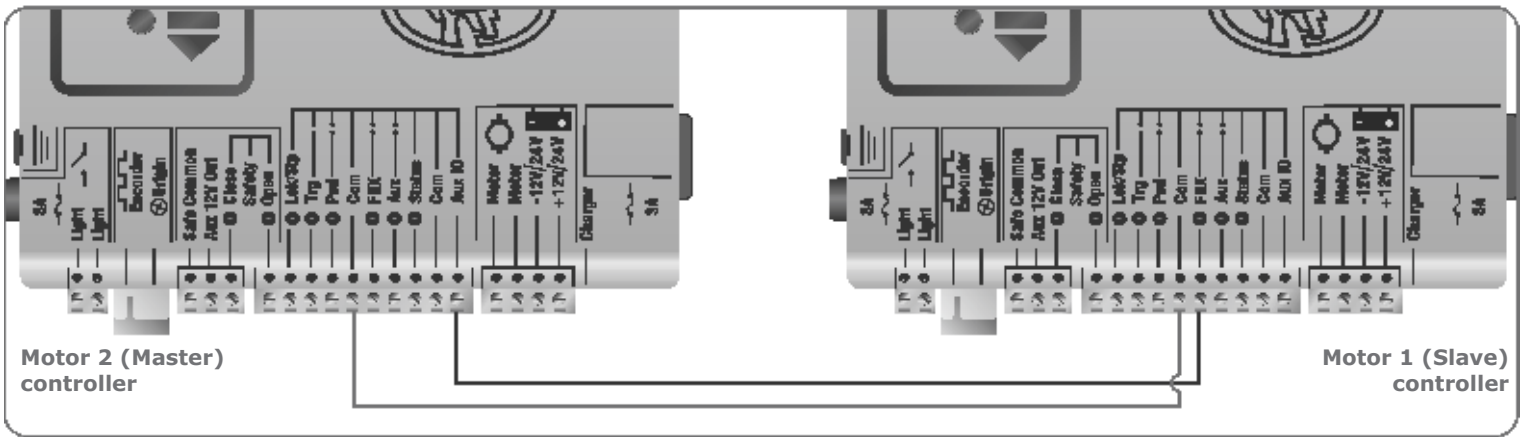

Two synchronised gates opening

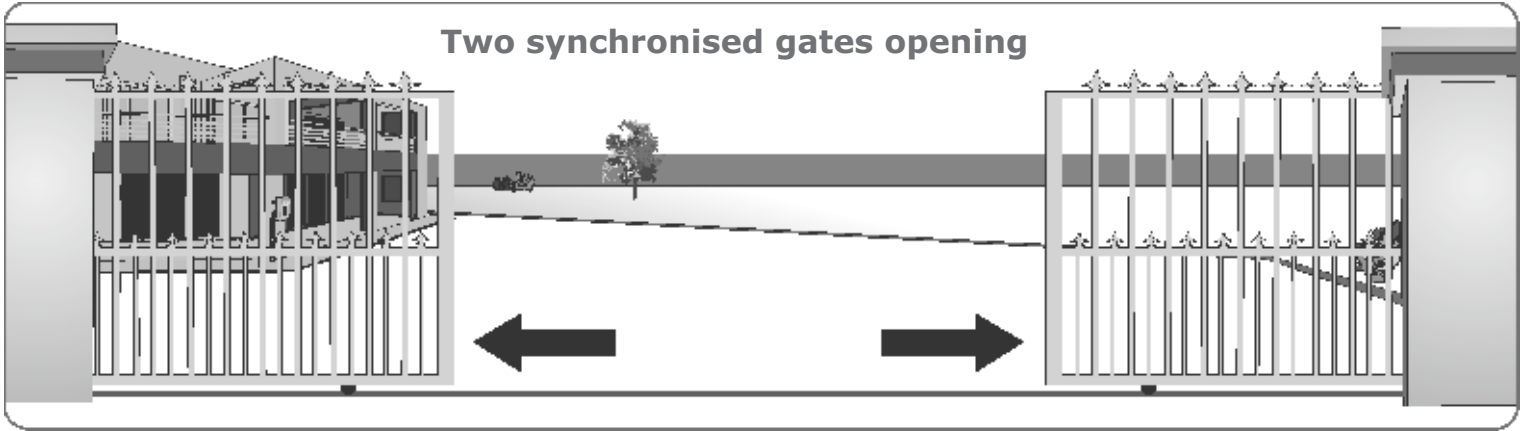

## Master controller settings



### Safety

External gate indication status.....	Indicator output.....	AUX IO
Closed indication.....	Off	
Part close indication.....	Off	
Closing indication.....	Off	
Part open indication.....	Off	
Opening indication.....	On	
Open indication.....	On	
Pedestrian indication.....	Off	
Unknown indication.....	Off	

## Slave controller settings



### Autoclose

Autoclose status.....	On
Autoclose timer.....	0 seconds



- Remote controls need to be programmed in Master controller receiver
- If the pedestrian function is required, either connect the receiver's Normally-Open output to the PED terminal on the Slave controller or learn the remote to activate the PED function on the Slave controller receiver