

# Solo

## Proximity Access Control

Designed for simple stand-alone access control applications where security, cost & simplicity are important

- Stand-Alone: 50 Tag Capability
- 13.56Mhz - RFID Technology
- Excellent Read Range
- Keyring Proximity Tag - Zap Tag - with Identification Label
- Selectively Add & Delete Tags
- Output Channel -  
(Selectable Relay Contact or Smart Switch 2 Compatible)
- Free Exit Input
- Door Sense Input
- Alarm Output -  
Door Left Open (pre-warn via onboard buzzer)  
Door Forced Open
- Anti-Tamper
- Two Master Tags
- Firmware Upgrade Facility

# Quick Guide



## Procedure

### 1 Power On

Connect power to Reader

### 2 Observe Top Lights



**TOP ROW LIGHTS** flash in sequence indicating BLANK memory

### 3



**Present and REMOVE** each NEW TAG to the SOLO Reader

### 4



**TOP GREEN LIGHT** will flash  
**BUZZER** will sound to indicate a successful addition

### 5



**Repeat from step 3** as required. The first two tags presented automatically become master tags.

### 6



**Present and REMOVE** the Master Tag

The SOLO Reader will enter normal RUN MODE

# QUICK ADD I

## New Installation



## NOTES:

- Tags will be added sequentially to the empty Memory Locations of the SOLO Reader. Previous Memory Locations will not be overwritten.
- To **ABORT** wait for  $\pm 60$  seconds for the **SOLO** to **RESET**

## Procedure

1	Observe Lights   	<b>Present and HOLD</b> either Master Tag until <b>all lights turn ON</b>
2		<b>Remove</b> the Master Tag
3	Observe Top Lights  	<b>Top green light</b> will remain <b>on</b>
4		<b>Present and remove</b> each new Tag to the SOLO Reader
5	  	<b>TOP GREEN LIGHT</b> will flash and the <b>BUZZER</b> will sound to indicate a successful addition.
6	     	<b>Repeat from step 3</b> as required
7	 	<b>Present and REMOVE</b> the Master Tag

The SOLO Reader will enter normal RUN MODE

# QUICK ADD II


## Existing Installation



## NOTES:

- This option will remove all tags from the SOLO Reader's memory but will not change any of the configuration settings or timer values.
- To **ABORT** wait for  $\pm 60$  seconds for the **SOLO** to **RESET**

## Procedure

1	Observe Lights    	<b>Present and HOLD</b> either Master Tag until <b>all lights turn ON</b>
2		<b>Remove</b> the Master Tag
3	Observe Top Lights  	<b>Top green light</b> will remain on
4	Observe Bottom Lights    	Only <b>BOTTOM RED LIGHT ON</b> <b>Present and remove</b> the Master Tag
5	 	<b>Top red light</b> will turn on
6	   	Only <b>BOTTOM GREEN LIGHT ON</b> <b>Present and HOLD</b> the Master Tag
7	   	Continue <b>HOLDING</b> All the <b>LIGHTS</b> will begin to flash Continue <b>HOLDING</b>
8	 	Continue <b>HOLDING</b> Wait for the buzzer to bleep three times
9		Remove the Master Tag
10	 	The <b>TOP ROW LIGHTS</b> appear to chase each other, this indicates a Blank Memory.











**QUICK DELETE**  
**All Tags**



## NOTES:

- All configuration and timer settings will be defaulted to factory settings.
- No tags will be removed from the SOLO Reader memory.

## Procedure

1	Observe Lights    	<b>Present and HOLD</b> either Master Tag until <b>all lights turn ON</b>
2	Observe Top Lights    	Continue <b>HOLDING</b> until <b>ONLY the TOP RED LIGHT</b> turns ON
3	 	Remove the Master Tag

The SOLO Reader will enter normal RUN MODE

**QUICK PARAMETERS**  
Factory Default Settings



## NOTES:

- **THIS PROCEDURE MUST BE COMPLETED IN FULL. DO NOT ABORT THIS PROCEDURE.**
- Both Master Tags must be present in the SOLO Reader memory.

### Procedure

1	Observe Lights				<b>Present and HOLD</b> either Master Tag until <b>all lights turn ON</b>
2	Observe Top Lights				Continue <b>HOLDING</b> <b>Top Red Light</b> will turn ON
3					Continue <b>HOLDING</b> <b>Top Green Light</b> will turn ON
4	Observe Bottom Lights				Continue <b>HOLDING</b> <b>Top Green Light</b> will remain ON <b>Bottom Green Light</b> will turn ON
5					<b>Remove</b> the Master Tag

The BOTTOM GREEN LIGHT will flash to indicate that the SOLO Reader is in Auto-Learn Mode.

# AUTO LEARN Disable

### Procedure

1	Observe Lights				<b>Present and HOLD</b> either Master Tag until <b>all TOP lights turn ON</b>
2					<b>Remove</b> the Master Tag

The BOTTOM RED LIGHT will flash to indicate that the SOLO Reader is now in Normal Run Mode

# AUTO LEARN

Limited Time ( $\pm 7$  days)